

EVERLOCK

User's manual

BDS-312



⚠ The date of installation must be recorded in the guarantee letter to get a free service.

📖 Please read the safety instructions before use.

📖 Keep this manual in a convenient place so that you can refer to it when necessary and be sure to deliver it to prospective customers for their convenience of use.

How to change password and set-up


Preparation



* Open the door




* Set UNLOCK location

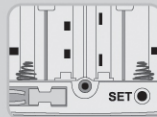

* Open Battery cover

SET Switch

How to Change password

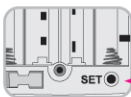

SET Switch

① Press SET Switch once.



(ex : 8282)

② Enter new password.



③ Touch * button.



(ex : 8282)

④ Enter new password once again



⑤ Touch * button.

"b~eep~ing"

⑥ Password change completion.
(confirmation beep)

How to Register and Delete Card Keys (Electronic Keys)

How to delete Card keys (Electronic keys)



SET Switch

① Press SET Switch twice.



② Touch * button



③ Push start button

"Beep, Beep, Beep"

③ Three short confirmation beeps

How to register Card keys (Electronic keys)

- ① Press SET Switch twice.
- ② Contact the card to be registered on card key reader.




● A long confirmation beep
("b~eep~ing")




● Electronic Key Registration
a long confirmation beep
("b~eep~ing")

How to Change Set-up

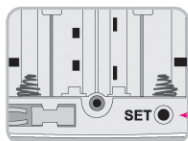


SET Switch

- ① Press SET Switch **3 times**.
- ② Press the number of mode you want to set up.
- ③ The mode is complete with confirmation beep ("b~eep r~ing")

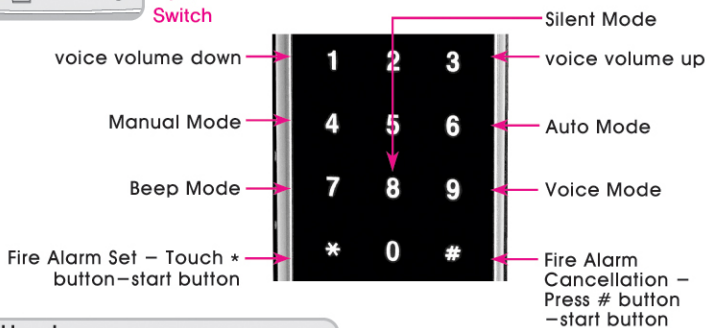

How to use emergency power

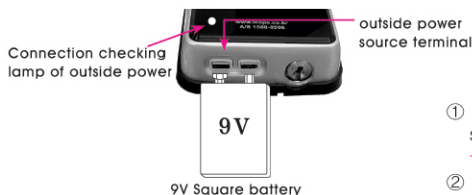

- ① Put the battery to the outside power source terminal
– Check if the red LED flashes
- ② Enter the password and open the door

How to replace batteries



- Use Alkaline batteries only.
(It may not be worked with low-priced batteries or rechargeable batteries.)

1. Instruction for safety	5
Emergency operation in case of fire	
2. Caution for using	6
2-1. Caution for installation	6
2-2 Caution for operation	6
2-3 How to manage emergency keys	7
2-4 Caution for battery use & replacement	7
3. Product Specification	8
4. Product Features	8
5. Contents of Product	11
6. Identification of Product	12
7. Set Switch MENU	13
8. Change Password / Register or Delete Card keys	
(Electronic keys) / Change Set-up	14
8-1 Preparations for the change of password, the registration or deletion of card keys (electronic keys) or the change of settings	14
8-2 How to change Password	14
8-3 How to delete Card keys (Electronic keys)	15
8-4 How to register Card keys (Electronic keys)	15
8-5 How to delete Indoor Remote Control	16
8-6 How to register Indoor Remote Control	16
8-7 How to set up modes	16
9. General Function	16
9-1 How to open the door	16
9-2 How to open and close the door from inside of the house	17
9-3 Dual locking Mode	17
9-4 How to open and close the door from outside of the house	17
9-5 Function for checking the completion of locking	18
9-6 Use of power from outer source	18
9-7 Alarm Function for forcible entry	18
9-8 Function for notification of Manual mode	19
9-9 Functions for coping with the malfunction of the Open/Close Sensor	19
9-10 Function for Dead Bolt protection	19
10. Troubleshooting	20
11. Criterion of limited warranty service	21
12. Contact Us	22
13. Product warranty	23

1

Instructions for safety

Please read the following safety instructions to prevent any accident, property damage and inconvenience. Children should be well educated about the operating instructions. Keep this manual in a convenient place so that you can refer to it when necessary.

Meaning of warning, caution, and reference



Warning

Must be followed to protect your physical injury



Caution

Must be followed to protect your property



Reference

Additional information



General warning or caution




Prohibited



Must observe

Emergency operation in case of fire

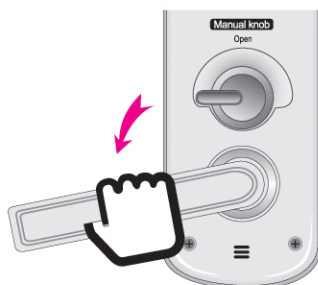

Push down the handle and open the door.

2 Caution for using

Please note the following for effective use of the product without any trouble.

2-1 Caution for installation



Make sure that any hole in the door such as a milk drop is closed up before installation.

Unlawful entry could be attempted by operating the digital door lock through a hole like a milk drop running from outside to inside.



Do not attempt to install, disassemble or repair the unit by yourself.

In case of product damage caused by installation, disassembly or repair at your discretion, a user's fault is acknowledged and the after-sales service is charged. Do not disassemble the product but contact the purchase shop or the head office.



Make sure the door is not out of the frame. Otherwise, it may cause deadbolt jam.

If the door is out of the door frame, the deadbolt could be jammed and broken when you open and close the door.



At the installation of the product, avoid exposure to direct sunlight or rain.

The product is equipped with a basic water-proof system, but if water gets into the product due to a strong rainstorm, it could cause a malfunction.

2-2 Caution for operation



Do not lend your card keys (electronic keys) or disclose the password to others.

The leak of card keys (electronic keys) or P/W may result in a forcible entry. Therefore, you must be careful about keeping your card keys and password secret. In case you lose your card key (electronic key), be sure to delete the card key (electronic key) and re-register all the card keys (electronic keys). In case the password is leaked, change password immediately.



Make sure the door is securely locked whenever you leave your house.

We do not take responsibility for damage caused by not locking the door.



Do not operate the product with wet hands and make sure that any liquid such as water, soda or juice does not get into the inside of the product.

It may damage the product.



Handle the product with special care. Excessive force or carelessness may cause product damage.

It could break down and you cannot enter or leave. In this case, a user's fault is also acknowledged, the service is charged without regard to the warranty period.



Clean only with a soft dry cloth.

Do not use water or any type of solvent such as gasoline or benzenes as they can cause damage to the electronic circuit, deterioration and/or the paint may peel-off.

2-3 How to manage emergency keys



Have some of the emergency keys with you or keep them in a safe place outside the house just in case. (ex. car, office and etc.)

2-4 Caution for battery use & replacement



Always check the electrode directions when inserting the batteries.

Misplaced or poor electrode contact may lead to battery explosion, liquid leak or the generation of heat, which may cause product trouble.



Use alkaline AA batteries and do not mix with other kinds of batteries.

Battery life could be shortened or it may cause product trouble.
Battery might be also discharged rapidly.



Do not use rechargeable batteries and manganese batteries.

Battery life could be shortened or it may cause product trouble.
The door might not open.



Replace all batteries instantly if you hear a voice message saying "Change batteries" when the door lock is open or closed.

Even after the voice message about replacement, some batteries could be used about 50 times, but others might be discharged immediately depending on the quality of batteries. Unless you replace the batteries at the right time, the "Open" or "Automatic Locking" of the door lock might not function properly.



Open the battery cover at least once every three months and check to see if any liquid has leaked.

Liquid leak in the battery brings a rapid decrease of battery life and may cause product trouble.



When the batteries run down, replace all batteries at the same time. Do not mix new and used batteries when you replace batteries.



Even after the replacement of batteries, the registration of P/W, card keys and electronic keys are not erased, but are kept.

 
 
3 Product Specification

- Front (Outside) : 27(D) x 78(W) x 283(H)
- Main (Inside) : 35(D) x 75(W) x 295(H)
- Applied power : DC 6V (1 sets of four 1.5V AA Alkaline batteries)
- The life of batteries :
App. 1 year (standard use of 10 times a day on regular condition)
- Number of registered cards(electronic keys) :
20 pieces (ISO 14443A TYPE Metro Card)
- Number of registered remote controls : 4 pieces
- Heat detection sensor temperature : $70 \pm 5^{\circ}\text{C}$
- Use humidity : lower than 70% RH
- Use temperature : $-15^{\circ}\text{C} \sim +50^{\circ}\text{C}$

4 Product Features

1. Verbal directions

It offers directions according to operation conditions in a verbal message or a beeping sound. As the following descriptions go by verbal directions, refer to the beep messages when you set up beep mode.

Descriptions	Verbal Mode	Silent Mode	Beep Mode
* When you open the door using P/W * When you open the door using cards(electronic keys) * When you open the door using remote controls	"Open"	—	(Ding Dong Daeng)()
* When you lock the door inside the house * When you lock the door outside the house * When you do not open the door within 7 seconds after the recognition of P/W or cards(electronic keys)	"Close"	—	(Ding Dong)()
* When the wrong P/W is inputted * When the wrong P/W is inputted 3 times in a row (within 2 minutes)	"Non-registration" "Ring Ring"		
* When you press "Start" button or contact registered cards(electronic keys) in the "LOCK" position of the dual locking mode,	"Safe mode"		
* When batteries need replacement	"Change batteries"		

2. Panic function

- * Just pushing down the handle will open the door from inside of the house.

3. Heat sensor

- * In case of fire, a heat detection sensor is in action and the door is automatically opened with the alarm sound.

4. Use of cards(electronic keys)

- * You can unlock the door using the registered cards (electronic keys) from the outside of the house in an easy and simple way.

5. Convenient switch of Auto/Manual mode

- * The product has both Auto mode and Manual mode and it provides more convenient application to users. In Auto mode the door is automatically locked after a certain time after closing, and in Manual mode the door is kept open instead of being automatically locked.

6. Combined use for both left and right hand direction

- * You can use the product for both left-sided and right-sided door.

7. Automatic re-locking

- * Unless you open the door within 7 seconds after contacting cards (electronic keys) or inputting P/W, the door will be automatically locked.
This function prevents strangers from entering the house.

8. Easy and simple installation

- * Designing the product according to KS(Korean Industrial Standards) makes a quick installation possible without any extra work.

9. Dual locking

- * Inside locking device attached double keeps off trespassers on user's house and helps customers use the door lock more safely.

10. Automatic locking

- * In Auto mode, just closing the door will automatically lock the door.



In Manual mode, automatic door locking program will no longer be functional. Under the condition that Dual Locking Switch is in the "LOCK" position, automatic locking does not work when you open the door inside the house using a handle.

11. Anti-trick or antitheft function

- * All the functions are suspended if unregistered P/W is inputted 3 times in a row within 2 minutes. (It will be restored to the original state 2 minutes after suspension.)

12. Verbal direction on the time of battery replacement

- * When batteries need replacing, the product lets users know it through the verbal direction of "Change batteries."

Once hearing the verbal direction for battery replacement, change batteries immediately.

- ! Unless you replace batteries at the right time, "Open" or "Automatic Locking" device might not function properly. Once the verbal direction for battery replacement is heard, card keys will not function.

13. Sturdy body of the product

- * Its body is strongly manufactured from die-cast metal to endure the breakdown of the external part and it provides much better security.

14. Warning sound

- * There will be a strong warning sound if someone makes an attempt to open the door with a force.

15. Notification of Manual mode

- * When you leave the house in Manual mode, you will hear three beeps("beep beep beep") one second after closing the door.
The beeping sound is the notification of Manual mode.

16. Protection of Dead Bolt

- * If you attempt to lock the door using Manual OPEN/CLOSE Device when the door is open in Auto mode, the door is automatically open with the alarm sound.

17. Warning sound of malfunctions of OPEN/CLOSE

- * In case "Open" and "Close" is not functioning properly due to some trouble between a door and the door frame, there is a warning sound.

18. Notification of Dual locking mode

- * When you open the door using a handle in Dual locking mode, the verbal message of "Safe mode" is heard, indicating Dual locking mode.
of "Safe mode" is heard, indicating Dual locking mode.

19. Remote control (Option)

- * You can open the door without physically walking to the door and simply use the remote control by just putting the applicable remote control module.
With wireless remote control function, you can open the door inside or outside of the house. Remote controls can be registered and used up to 4.

20. Imaginary function

- * This function keeps your password safe with the imaginary number against a stranger trying to figure out the password.

5 Contents of Product



Front (Outside)



Main (Inside)



 
Remote control(Optional)



Manual




Card key



Mortise

- 8 batteries (1.5V AA Alkaline)
- 3 remote control batteries (1.5V AAA Alkaline, Option)
- Letter of guarantee for the product
- Installation template

6 Identification of Product

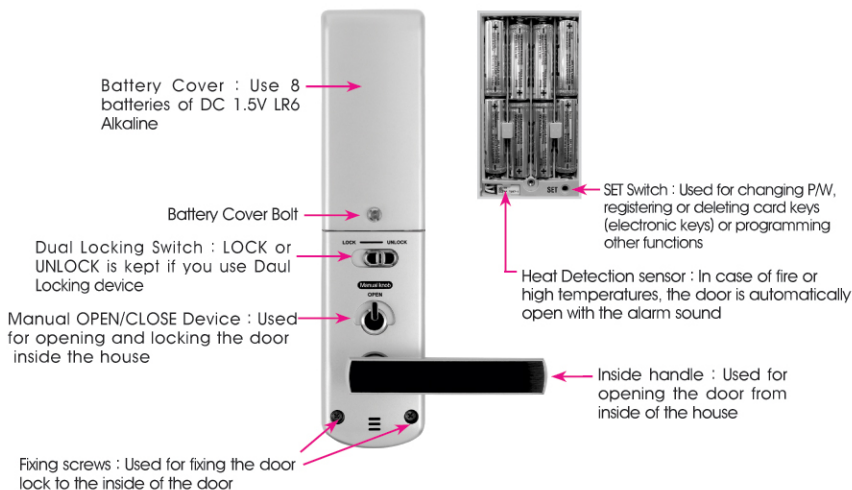

7 SET Switch MENU

Please refer to appropriate heading for details

1. Press SET Switch once – one short beep ("beep") : to change password
2. Press SET Switch twice – two short beeps ("beep, beep") : to delete or register card keys (electronic keys)
 - 1) Card keys (electronic keys) deletion
Press the * button – start button – Deletion is complete after you hear three short beeps ("beep, beep, beep")
 - 2) Card keys (electronic keys) registration
* Contact the card key (electronic key) to be registered – Registration is complete with a long beep ("beep ring").
* Contact additional card keys (electronic keys) for registration
3. Press SET Switch 3 times – three short beeps ("beep, beep, beep") : to change set-up
 - 1) Fire alarm set : Press the * button – start button
– completes with a long beep ("beep ring")
 - 2) Fire alarm cancellation : Press the # button – start button
– completes with a long beep ("beep ring")
 - 3) Manual mode set : Press 4 in the keypad
– completes with a long beep ("beep ring")
 - 4) Auto mode set : Press 6 in the keypad
– completes with a long beep ("beep ring")
 - 5) Beep message set : Press 7 in the keypad
– completes with a long beep ("beep ring")
 - 6) Silent mode set : Press 8 in the keypad
– completes with a long beep ("beep ring")
– In Silent mode, there is no voice message like "Open" or "Close"
 - 7) Voice message set : Press 9 in the keypad
– completes with a long beep ("beep ring")
4. Press SET Switch 4 times – four short beeps ("beep, beep, beep, beep") : to delete or register remote control
 - 1) Remote control deletion : Press the * button – start button – Deletion is complete after four short beeps ("beep, beep, beep, beep")
 - 2) Remote control registration : Press the button of remote control to be enrolled
– a long confirmation beep ("beep ring")
* Just one remote control is registered at a time.

8


Change Password / Register or Delete Card keys(Electronic keys) / Change Set-up

8-1 Preparations for the change of password, the registration or deletion of card keys (electronic keys) or the change of settings

1. Keep the door open so as to make it possible to come in and go out.
2. Open Key cover.
3. Open Battery cover.
4. Programming must be performed within 7 seconds of time when the keypad lamp is on after pressing the SET Switch. Otherwise, it is cancelled automatically.




* Open the door.

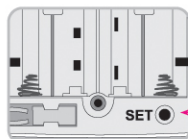

* Open Battery cover.

8-2 How to change password

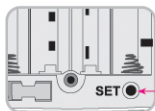

SET Switch

- ① Press SET Switch.
 - Keypad lamp flashes
 - * While the lamp is on, enter password.



- ③ Press the * button.



- ⑤ Press the * button.



(ex : 8282)

- ② Enter desired password.
 - It can be set with any numbers from four to twelve digits. Enter your number in order.
 - The same password can be used.



(ex : 8282)


- ④ Enter password once again
 - In case the wrong numbers are entered, the change of password is not complete and the original password is kept.

“Long Beep”

- ⑥ Password changing confirmation beep

! Caution – After installation, make sure password is changed before using the product. while change the password can not use panic function.

8-3 How to delete Card keys (Electronic keys)

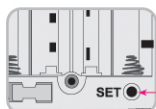

SET Switch



start button



“Beep, Beep, Beep”

- ① Press SET Switch twice.
– Keypad lamp flashes.

 
- ② Press the * button.

- ② Press the start button.

- ④ Three confirmation beeps deleted.

❗ **Caution** – After installation, make sure the card key (electronic key) is deleted and the enclosed cards (electronic keys) are registered before using the product.

8-4 How to enroll Card keys (Electronic keys)



- Press SET Switch twice.
– Keypad lamp flashes with two short beeps (“beep, beep”)

SET Switch



 
- Contact the card to be enrolled on card key reader.
– Registry completes long beep. (“beep, beep, beep, b~eep ring”)



- Contact the electronic key to be enrolled on the key reader.
– Registry completes with a long beep (“b~eep ring”)

❗ **Caution** – You can register up to 20 cards keys (electronic keys). Additional cards (electronic keys) can be enrolled by contacting them in a row.

8-5 How to delete Indoor Remote Control (Option item)



SET Switch



start button



“Beep, Beep, Beep”

- ① Press SET Switch 4 times.
– Keypad lamp flashes with four short beeps (“beep, beep”).


- ② Press the * button.

- ② Press the start button.

- ④ Three short beeps Remote controls registered are all deleted with three confirmation beeps.

❗ **Caution** – After installation, make sure the remote control is deleted and registered again before using the product, if your remote control is lost, delete the remote control and re-register a new one

8-6. How to register Remote Control (Option item)

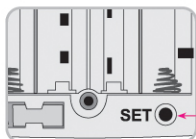

SET
Switch

- ① Press SET Switch 4 times.
 - Keypad lamp flashes with four short beeps. ("beep, beep, beep, beep")
 - While the lamp is on, press remote Control button.




("beep r~ing")

- ② Press "OPEN" button of Remote Control.
- ③ The mode is complete with long confirmation beep


! Caution – Just one remote control is rested at a time to prevent faulty registration. Up to four remote controls can be registered. If you want additional remote controls, you can purchase them.

8-7. How to set up modes

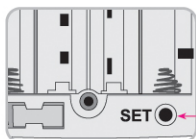

SET
Switch

- ① Press SET Switch 3 times.
 - Keypad lamp flashes with three short beeps. ("beep, beep, beep, beep")
 - While the lamp is on, press the number button.

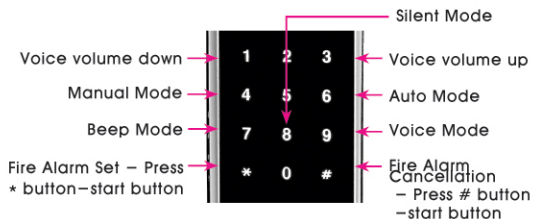

" A long Beep"
("beep r~ing")

- ② Press the number of mode you want to set up.
- ③ The mode is complete with long confirmation beep

9 General Function

9-1 How to open the door

A. Using password

1. Press the start button
 - Press the ***(Start)** button.
 - Keypad lamp flashes with a short beep. ("**beep**")
2. When using panic function : enter password after press undecided number.
When using panic function : enter password.
3. Press the ***(Start)** button or start button.
4. The verbal direction of "**Open**" is heard and the lamp is turned off.
(You must open the door with 7 seconds of time. Otherwise, it is automatically re-locked with the verbal direction of "**Close**")
5. Open the door using a handle.

B. Using Card keys (Electronic keys)

1. Contact the registered cards (electronic keys) to the key reader.
2. The verbal direction of "**Open**" is heard.
(You must open the door with 7 seconds of time. Otherwise, it is automatically re-locked with the verbal direction of "**Close**")
3. Open the door using a handle.
Once the verbal direction of "**Change batteries**" is heard, cards do not function.

C. Using Remote control

1. Press "OPEN" button of Remote control.
 - LED of Remote control is turned on for 3 seconds.
2. The verbal direction of "Open" is heard.
You must open the door with 7 seconds of time. Otherwise, it is automatically re-locked with the direction of "**Close**".
3. Open the door using a handle.

9-2. How to open and lock the door from inside of the house

A. How to open the door

- 1) Push down the handle and open the door.
- 2) Turn manual OPEN/CLOSE device toward "**Open**" position, push down the handle and open the door.

B. How to lock the door

- 1) In Auto mode
 - a. Just closing the door will automatically lock the door.
 - b. If it is locked properly, the verbal direction of "**Close**" is heard.
- 2) In Manual mode
 - a. Turn Manual OPEN/CLOSE Device toward "**CLOSE**" position.
 - b. If it is locked properly, the verbal direction of "**Close**" is heard.

9-3 Dual Locking Mode

1. Turn Dual Locking Switch in the Inside toward "LOCK" position (left).
– The verbal message of "Safe Mode" is heard.
- ❗ 2. In Dual Locking mode, you cannot open the door using password, remote control or card keys (electronic keys).
3. Press the *(Start) button and the verbal message of "Safe Mode" is heard.
* If you want to cancel Dual Locking mode, turn Dual Locking Switch toward "UNLOCK" position (right).
- ❗ 4. With the door closed, if you turn Dual Locking Switch toward "LOCK" position, the door cannot be open from outside of the house.
5. With the door open, if you turn Dual Locking Switch toward "LOCK" position and turn Manual OPEN/CLOSE Device toward "CLOSE" position, the door cannot be open from outside of the house.

9-4 How to lock the door from outside of the house

A. In Auto mode

1. Just closing the door will automatically lock the door.
2. If it is locked properly, the verbal direction of "Close" is heard.

B. In Manual mode

1. Press the start button.
2. If it is locked properly, the verbal direction of "Close" is heard.

9-5 Function for checking the completion of locking

1. If it is locked properly, the verbal direction of "Close" is heard.
2. Inside locking: Auto/Manual mode
* If you turn Manual OPEN/CLOSE Device toward "CLOSE" position, the door is locked.
* You must open the door within 7 seconds of time after entering password or contacting card keys (electronic keys). Otherwise, it is automatically re-locked.
* It is automatically re-locked without regard to Auto/Manual mode.
3. Outside locking: Manual mode
* Press the start button of keypad.

9-6 Use of power from an outer source

- 1) This product is designed to use power from an outside source when the door lock is not functioning due to dead batteries in the lock.
- 2) When the lamp of the keypad is not turned on after or pressing the start button, use 9V battery.
- 3) Use power from an outside source when the door is not open and there is a long ring ("ring, ring"), though you enter P/W, after the verbal message of "Change batteries."

- 4) 9V battery is 6F22 (FC-1), available on the market.
- 5) When using 9V battery, accurately put the battery to the outside power source terminal and use the P/W or Card.
 - If the battery is placed properly, the blue LED on the upper side of the outside power source terminal flashes.

9-7 Alarm Function for forcible entry

1. In case of a forcible attempt to open the door from outside without entering P/W or contacting the registered card (electronic key), a strong warning sound is given.
2. How to cancel the warning sound
 - 1) When you know the P/W, press the *(Start) button, enter the P/W, then press the *(Start) button once again. The warning sound will be cancelled.
 - 2) By contacting the registered cards (electronic keys), you can cancel the warning sound.
 - 3) By using the registered remotcontroll you can cancel the warning sound.

9-8 Function for notification of Manual mode

When you leave the house in Manual mode, you will hear three beeps ("beep beep beep") one second after closing the door unless you switch it to "CLOSE" position. The beeping sound is the notification of Manual mode.

9-9 Functions for coping with the malfunction of the Open/Close Sensor

1. With the door closed, when the Open/Close sensor is not functioning
 - 1) The warning sound of forcible entry is given.
 - 2) Cancel the warning sound using P/W or the registered card keys (electronic keys).
 - 3) Switch the door lock to the Manual mode and use the product.
2. With the door open, when the Open/Close sensor is not functioning
 - 1) At the moment, you cannot switch the door to "CLOSE" position.
 - 2) Switch the door lock to the Manual mode and use the product.
3. In case of a malfunction of the Open/Close sensor, use the product in the Manual mode at first, and then apply for after-sales service.

9-10 Function for Dead Bolt protection

When the door is not open in the Auto mode, if you turn the Manual OPEN/CLOSE Device toward "CLOSE" position, the door will be automatically open with a warning sound by the function for Dead Bolt protection.



Be careful not to have the Dead Bolt broken because this function is not working in the Manual mode and under the state of "Lock" of the Dual Locking Switch.

10 Troubleshooting

Tips for solutions to most of the problems arising while in use.
Many problems could easily be solved when you carefully read and followed.

Symptom	Reason	Remedy
Not working after insertion of batteries	Misplaced or poor electrode contact	Check out the electrode before battery insertion.
Card registration problem	Metro CARD	Some of Metro CARDS cannot be registered. Use another card and try again.
	Entry/exit card of unmanned security company?	Use the 13.56Mhz type card
	Registration is already complete	After completion, three beeps ("beep, beep, beep") will be heard in attempting to register the card again.
Electronic key registration problem	Registration is already complete	After completion, three beeps ("beep, beep, beep") will be heard in attempting to register the card again.
	Electronic key of other company	Use the electronic keys of this product and try again
Two short beeps ("beep, beep") when entering P/W	Battery change alarm sound	Replace all the batteries with new Alkaline batteries
The verbal direction of "Change batteries" while in use	Battery change alarm sound	Replace all the batteries with new Alkaline batteries
The door makes a long beep ("beep rring") and will not open although P/W is inputted	Time for battery replacement is past	Open the door using 9V battery, and then replace all the batteries with new Alkaline batteries
Motor is not functioning well with a long beep ("beep rring") when the door is open or closed	Deadbolt Jam due to gap between Deadbolt and the door frame	Make sure the door is on the door frame.
The verbal direction of "Safe mode" when you open key cover or contact card keys (electronic keys)	Set up in dual locking mode	Turn the Dual Locking Switch toward "UNLOCK" position
All the functions are suspended while entering P/W	In case of entering wrong P/W three times in a row, all the functions are suspended for 2 minutes	Try again about 5 minutes later
The door is not open although you use 9V battery due to dead batteries	Misplaced or poor electrode contact of 9V battery	Place 9V battery again and check if the blue LED in the upper side of outside power source terminal flashes
The door is not automatically locked after closing it	Sensor trouble or magnet separation	Switch the setting to the Manual mode and apply for after-sales service

11 Criterion for limited warranty service

Customer Damage Type		Warranty Service	
		Within the warranty period	After the warranty period
Within one month of purchase, main parts need repairing		Replacement of a product	
Under normal conditions, defects in performance or function	For one year from installation	Free service	Charged service
	Same recurring defects twice	Free service	Charged service
	Same recurring defects 3 times	Replacement of a product	Charged service
	Damage caused by not holding parts in spite of the retention period	Replacement of a product	Refund : add 10% to the depreciation using straight line method
Troubles caused by user's negligence or fault (In case repair is impossible because the company does not hold parts in spite of the designated retention period)		Replacement after charging the cost equivalent to charged service	Charged service
Defects due to acts of God, misuse or abuse, negligence		Charged service	Charged service
Breakdown of a product caused by not carrying emergency keys		Charged service	Charged service

- ❗ The company shall not be liable for any problems caused by customer's not being aware of the manual and any defect concerned with the cleaning of the product.

- ❗ Please read the safety instructions before use.
- ❗ Keep this manual in a convenient place so that you can refer to it when necessary and be sure to deliver it to prospective customers for their convenience of use.
- ❗ This product is a locking device based on the preservation of password. Therefore, except the defects in function, the company shall not be liable for any incidental or consequential damages due to negligence (leak of password, loss of card keys (electronic keys) or being left the door open), the breakdown of extraneous things.
- ❗ In Manual mode, the door is not automatically locked. Make sure the door lock is turned toward "CLOSE" position in case of long term absence.

12 Contact Us

Headquarters & Factory

169-1, Jubuk-ri, Yangji-myeon, Cheoin-gu, Yongin-si, Gyeonggi-do, KOREA 449-822
TEL +82-31-337-1203 | FAX +82-31-337-1209
www.bnbsol.com

Seoul R&DB Center

E&C Venture Dream Tower VI 808, 197-28, Guro-dong, Guro-gu, Seoul, KOREA 152-050
TEL +82-2-801-0199 | FAX +82-2-801-0299
www.bnbsol.com

Technical support : techsupport@bnbsol.com

Sales & marketing : sales@bnbsol.com

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, BNB Solutions will, for the length of one (1) year, ear, which starts with the date of original purchase ("Limited Warranty Period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or refurbished product. Defective products must be shipped at the consumers cost to BNB Solutions Co., Ltd.

The forgoing warranty shall not apply to defects resulting from abuse, misuse, accident alternation, neglect, use of unregistered parts, unauthorized repair or installation, or natural disaster, such as lightening, fire, strong winds, flooding, etc. BNB Solutions shall have the right of final determination as to the existence and cause of the defect.

THE WARRANTY SET FORTH ABOVE IS EXCLUSIVE AND NO OTHER WARRANTY, WHETHER WRITTEN OR ORAL IS EX-PRESSED OR IMPLIED. BNB SOLUTIONS SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

In no event shall BNB Solutions Co., Ltd. be liable for direct, indirect, special, incidental or consequential damages, (including loss of profits) whether based on contract, tort, or any legal theory. If you think you product needs servicing, please contact BNB Solutions cstomer service center.



Product name		Everlock		
Model name		BDS-312		
Date of purchase		Year	Month	Day
Customer	Name			
	Telephone			
	Address			
Agent (Sales)	Name			
	Telephone			
	Address			

The warranty y period "(Limited Warranty Period)" expires one(1) year after the date of purchase.

- If you want to receive good A/S, then you should submit the product warranty specifying the date of purchase, within the period of warranty.
- This product warranty cannot be issued again. Please, keep it safely along with the user's manual.
- The free warranty period expires one year after the date of purchase.
- If your negligence or carelessness has caused defects, or if the warranty period has expired, then you will be charged for A/S.
- If you discover some defects with the product, please contact your installer or our main office.

BNB Solutions Co., Ltd.



BNB Solutions Co., Ltd.

169-1, Jubuk-ri, Yangji-myeon, Cheoin-gu, Yongin-si, Gyeonggi-do, KOREA

TEL +82-2-801-0199 / FAX +82-2-801-0299

Homepage : www.bnbsol.com / E-mail : foryou@bnbsol.com